



DVD
Universal
ASTELLO®
RM-239E SUPER DVD
CODE FORM FOR THE
COMPONENTS

Brand	Code
Alco	417,433,400
Aiwa	150,180,422,400
Alerprince	066,067
AIKO	179
AKAI	006
AKICO	434,400
AKIRA	406,407,409,400
AKISHI	181
AKUSTIC	179,258
Amoi	111,112,114,135
Aone	299
Abdefong	316
APEX	182
ARASHI	426,420,400
ASAKI	445,400
ASATRON	415,400
AUDIOTONE	404,400
AUDIA	298
AUDIOVOX	183
AVLIGHT	143
BBK	018,021,027,026,033,046,078,091,094,099,142,287,312
BLUESKY	400
BM	400
DOMBA	409,400
BULANTE	064,065
CAIXING	088,095
CD VIDEO	253,254,255,256
CHANGHONG	136,137,138,418

Brand	Code
COBY	185
CLASSIC	184,270,271
CRYSTAL	400,421
CYBERHOME	186
CYBERTRON	426,400
DAEWOO	086,087,187,188,189,190,191,192,193,194,267,279,325,400,441
DAIKEN	411,400
DAITA	400
DEASY	028,074,117,300
DENON	195
Ding Tian	127
Dihe	070,077,107,317
DIGIXMEDIA	199
DVD	016,019,261
DVD VIDEO	425,429,438,440,441,400
ELECTRIC	428,400
ELEKTRA	192,197
ELITE	400
EPROM	404,400
EXTEND	400
F&D	285
FISHER	233,262
FUJIELECTRIC	419,400
FURICHI	420,427,400
GE	231
GEM	427,400
GeWang	328
GIEC	089,292,294,295,299,310,322
GMC	400
GNG	409,400
GO VIDEO	199,200
GPX	201

Brand	Code
GVG	289,290
Haier	116,146
Haoli	068
HARMAN KARDON	276
HITACHI	202
HISENSE	134,143,311
Himage	125
HITER	089
HUABAO	029,061,062,063,302
HYUNDAI	065,400
IDALL	128
Jingwangpai	001,283
JingWei	011
Jugao	318
JVC	045,203,151,275
KAWACHI	417,400
KENDWAY	429,400
KENWOOD	075,204,205,206,454
Ketal	030
KONKA	139,207
LAFAYETTE	225
LASONIC	208,209
LQ	008,410,436,437
LINTRON	241
LONGZHIPAI	284
MARANTZ	211,212,213,227
MAJESTIC	210,265
Malata	002,009,023,024,073,146,147,151,297,313
MATSUI	442,400
MAXTRON	424,400
MEGA	400
MEGA TANS8	214
MITO	409,414,400

Brand	Code
MITOCHIBA	414,409,400
mitsui	216,217,269
MITZU	179,251
mitsubishi	215
MTB	218,219
NAKAI	428,400
NAKAMICHI	220
NAPA	221,277
NINTAUS	003,035,071,079,080,081,082,080,093,129,130,291,320,322
NORCENT	222
ONKYO	043,223,224
OKNO	072
PANASONIC	014,204,273,274,452
PANDA	038,051,052,053,102,105
PAI GAO	327
PARDIO	444,400
PHILCO	225,226,263,268,272
PHILIPS KARAOKE	228
PHILIPS	012,143,152,153,154,227,264,412
Pioneer	044,229
POLYTRON	405
PROSONIC POWER SOUND	252
PROSONIC	179
QIsheng	005,037,092,096,101,282,305,306,307,308,323,331
ROVER	408,400
RCA	230,231
ROYAL	225,272
SAMSUNG	004,006,017,049,104,149,202,232,266,403
SANYO	233,234,453
SAST	011,020,238,059,060,076,140,142,288

Brand	Code
SANSUI	013,046
SHARP	235,236,237
SHASUGI	406,400
Shinco	001,010,108
SHUMALING	036
SHERWOOD	319
SIEKO	400,407
SKYDRIVE	439,400
SONY	040,042,177,178,260,450
SONICO	259
SOWA	155
Sonashi SOUND TRACK	304
SKYWORTH -RGB	022,025,032,034,059,066,097,100,119,121,293,301,314,321
SMC	238
Star	118
STEELE	443,400
SUNSONIC	432,400
SUPERSONIC	225,239,272
SVA	109
TCL	000,015,039,054,055,120,315,431
TEAC	240
TIANLI	131
TICSONIC	428,400
THOMSON	083,230
TOP TEC	241
TOSHIBA	041,069,242,243,416
THOMSON	083,230
UNIREX	244
UNITRON	241
VCD2	245
VEGATRON	435,400

Brand	Code
VENON	438,400
VIAR	400,420
Victor	047,084,103
Vifa	050
VITRON	401,402,451
Seri depan 2xx	
Seri depan 3xx	
VITRON	402,451,401
Seri depan 6xx	
VITRON	451,401,402
Seri depan 8xx	
VOX	246
WEGA TANS8	278
Wanyan	126,146
WANBAO	296
WORLDSTAR	433,400
XIANPAI	070
YAMAKAWA	248
YAMAHA	227,247
YMT	303,304
YOSHIKAWA	430,400
YOUSHISHEN	124
YUNDAI	400
YuXing	115,156
ZONDA	249,250
OTHER BRAND	007,016,019,106,109,110,113,122,123,132,133,157,141,144,148,158,169,160,181,162,163,164,165,166,167,168,169,170,171,172,173,174,175,176,245,284,280,281,324,329,330,332

Brand	Code
MULTI 720	446
MULTI 1000	449
MULTI 1120	449
STARSAT SR-828	447
STARSAT SR-838	447
TELESONIC GSR-8000	447
Unisal Blast (silver casing)	448

MANUAL PAPER FOR DVD 690 IN 1

SET UP

- Power on DVD and put into play, put the remote control towards DVD.
- Keep pressing SET and then pressing POWER, release two keys when LED is red after three seconds. Enter into SETUP
- Enter three-digit code (LED flashes when input one number). If three-digit code is right, DVD is stopped to play and LED is off. The entered code is wrong if LED flashes two times and then keeps lighting.
- Check functions of other keys whether they are normal, it finishes setup if normal, otherwise please repeat from Step 2, select other three digits.

NOTE: The remote control exit from SETUP if you press SET at any time or press no key within twenty seconds.

AUTO SEARCH

- Power on DVD and put into play, put the remote control towards DVD.
- Keep pressing SET key, LED is lighting after five seconds. It enters into AUTO SEARCH after releasing SET.
- The remote control sends one group of code every two seconds, waiting for DVD stop then LED flashes.
- Press SET key at once to save the code when DVD is stopped, LED is off and exit from search mode.
- Check other keys whether they are normal, SETUP is finished if normal, otherwise please repeat from STEP 2

CODE DISPLAY

Please keep pressing SET, and press number 1 or 2 or 3 at the same time. 036 the code is the times how many times LED flashes. (Don't flash if the code is ZERO)

For example: 1) SET+1=0
2) SET+2=3
3) SET+3=6 Then CODE=036

